



USB FAN


User Manual



Model: MDF-15239

PLEASE READ AND SAVE THESE INSTRUCTIONS

PART FIGURE

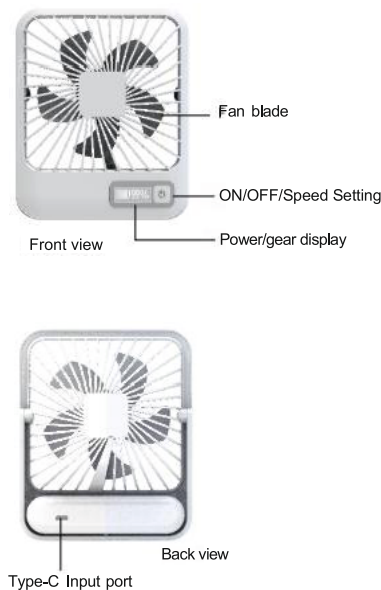

OPERATING INSTRUCTION

- ★ Press long to turn On / turn Off
- ★ Press the switch for 3 seconds to turn on 1st gear / Lowest speed
- ★ Press the switch for second time to turn on 2nd gear / Low speed
- ★ Press the switch for third time to turn on 3rd gear / High speed
- ★ Press the switch for fourth time to turn on 4th gear / Highest speed
- ★ Press the switch for fifth time to turn on 5th gear / Circulating in Natural mode

Attention:

1. The indicator light will flicker when battery is low; also speed will turn slowly.
2. When turn on the machine with very low battery, the indicator light will flicker and machine will be turned off automatically.
3. The Indicator light will flicker while charging battery. The light will stay after battery is full.

SAFETY INSTRUCTION

1. The voltage of the fan should be (5V) .
2. Never insert the finger, or other object through the grille when the fan is running.
3. Shut off the power supply when moving it to another place.
4. Be sure to unplug from the electrical supply source before cleaning.
5. Be sure to unplug when you leave home.

WARNING

1. Do not disassemble and change the fan's inner parts, if it does not work, please contact with our after-sales service.
2. Please refer to the actual product, when there are changes of the color and appearance.
3. Since the wind of this product is strong, it is better not to blow for a long time to babies and elderly.
4. When the supply cord is damaged, it must be replaced by manufacture or its service agent, or qualified person.

MAINTENANCE

1. Before cleaning, fan must be unplugged.
2. Keep the ventilator of the motor away from dust or fluff, remove the plug and do not try to separate the fan when cleaning with a vacuum cleaner. Please wipe up the fan surface with a wet cloth. Do not use any grinding tools or liquid to clean it, they might damage the surface.
3. Do not allow water and other liquid to get into the motor.

TROUBLE SHOOTING

| Fault Description | Reason analysis | Solution |
|---------------------------|---------------------------|---------------------------|
| The product does not work | USB port is not inserted | Insert the USB port |
| | On/off switch not turn on | Turn on the on/off switch |
| | Abnormal power supply | Use suitable power supply |
| Abnormal noise | Blade crack | Change fan blade |
| | Motor damage | Change motor |

NOTICE ABOUT RECYCLING



Your product is designed and manufactured with high quality materials and components which can be recycled and reused. This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste. Please dispose of this equipment at your local community waste collection/ recycling centre.

In the European Union there are separate collection systems for used electrical and electronic products. Please help us to conserve the environment we live in!

DECLARATION OF CONFORMITY

Herewith, Kalliopi Karyda & Co Lp states that this product, complies with the requirements of below directives:

EMC-Directive: 14 / 30 / EU

CE Marking: 93 / 68 / EEC

RoHS Directive: 11 / 65 / EU & 15 / 863 / EU

The detailed declaration of conformity can be found at www.morris.gr



Kalliopi Karyda & Co Lp
87A, 17th Noemvriou str, P.C. 55534
Thessaloniki – Greece
T: +302316006600 | F: +302316006650