 




# MORRIS

## COFFEE MAKER INSTRUCTION MANUAL

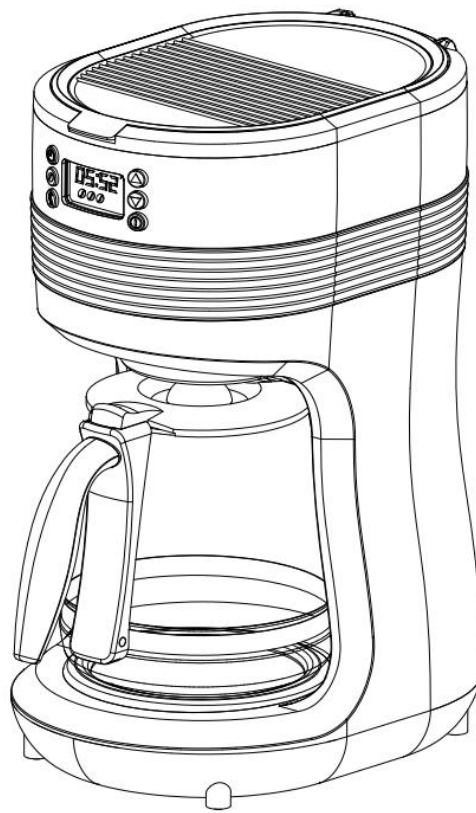

**MODELS:  
R20841CMC / R20842CMG  
R20843CMR / R20845CMK**

Read this manual thoroughly before using and save it for future reference  
Images are just for reference, please refer to actual product.

## **Important safeguards**

---

When using electrical appliances, basic safety precautions should always be taken to reduce the risk of fire, electric shock and/or injury to persons, including the following:

1. Read all instructions before use.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the coffeemaker.
3. To protect against fire, electric shock and injury to persons do not immerse cord, plug, or in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. **Always unplug from outlet when not in use and before cleaning.** Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to an authorized service facility for examination, repair or adjustment.
7. The use of accessory not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surface.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Do not use the appliance for other than its intended use.
12. Do not clean carafe with cleansers, steel wool pads, or other abrasive materials.
13. To disconnect, turn any control to "Off", remove plug from wall outlet. Always hold the plug but never pull the cord.
14. Scalding may occur if the cover is removed during the brewing cycles. Be careful not to get burned by the steam.
15. Some parts of the appliance are hot when operated, so do not touch with hand. Use only handles or knobs.
16. Do not set a hot carafe on a hot or cold surface.
17. Do not let the coffee maker operate without water.
18. Do not use a cracked carafe or a carafe having a loose or weakened handle.
19. Make sure the carafe is placed on the warming plate correctly during the brewing.
20. **WARNING:** To reduce the risk of fire or electrical shock, do not remove the base panel. No user serviceable parts are inside. Repair should be done by authorized service personnel only.
21. The carafe is designed for use with this appliance. It must never be used on a range top.
22. Do not operate your appliance in cabinet.

23. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
24. Children should be supervised to ensure that they do not play with the appliance.
25. This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
26. **Warning:** Potential injury from misuse.
27. The heating element surface is subject to residual heat after use.
28. The product is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.

## **WARNING: RISK OF FIRE OR ELECTRIC SHOCK**



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of fire or electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

 
1. To reduce the risk of electric shock, this plug is intended to fit into a outlet only one way. If it does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
2. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the extension cord must be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

## **IMPORTANT UNPACKING INSTRUCTIONS**

1. Place the box on a large, sturdy, flat surface.
2. Remove the instruction book and any other literature.
3. Turn the box so that the back side of the coffeemaker is down and slide the coffeemaker from the box.
4. After the coffeemaker has been removed, place the box out of the way and remove the top and bottom two egg tray inserts.
5. Grasp the carafe by its handle, remove it from the resting plate and **remove the poly bag**.
6. **Remove the poly bag covering** from the coffeemaker and lift the coffeemaker off the remaining two inserts. We suggest to keep/store all packing materials in case future shipping of the machine is needed. **Keep all plastic bags away from children.**

## **Components:**

---

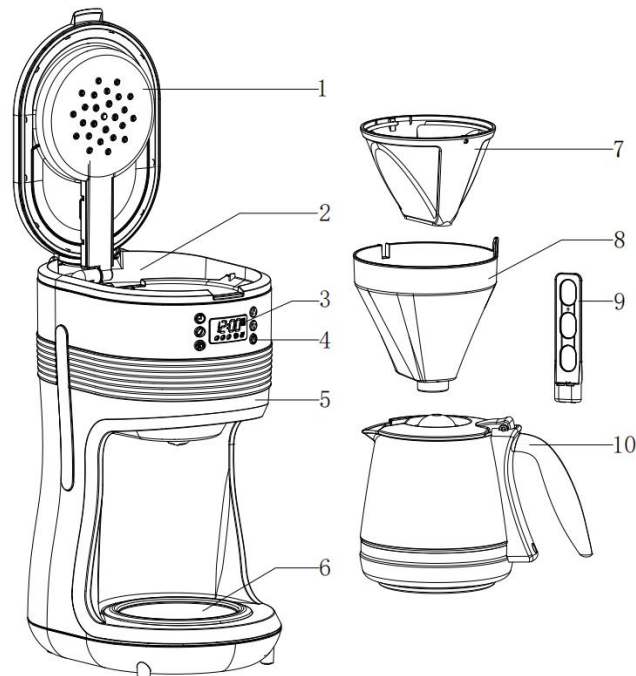

- |   |  |
|---|--|
| 1. Top inner cover (Vortex type Showerhead) | 6. Warming plate   |
| 2. Water tank                               | 7. Removable filter  |
| 3. Display screen                           | 8. Removable filter basket                                   |
| 4. Control button                           | 9. Charcoal water filter holder ***<br>(filter not included) |
| 5. Housing                                  | 10. Carafe   |

\*\*\* The charcoal water filter feature allows you to use, upon your discretion, market available charcoal bag water filters to further improve water taste.

Filter cartridges are not provided along with the unit.

For usage and maintenance instructions refer to the respective filter cartridges supplier of your choice.

The use of such a filter is only optional, and in all cases not necessary for the proper operation of the unit.

## Control panel

---



Time setting



Brew strength selection



Auto Cleaning button



Menu key: select up or increase



Menu key: select down or decrease



ON/OFF key



Clock display



Preset starting time

To start function within 24-hour.

After long pressing 'Time' button, the 'Preset' icon appears. You can program then, to start function after a specific time.

Set the required start time, coffee maker starts working after the time achieved and display screen will show countdown.



Keep warm mode



Silent / Unsilent mode

In standby mode press down/up button for about 2 sec. at the same time to switch silent/unsilent mode.

**Note:** if the coffee maker was set in Silent mode and you shut off the machine and/or un-plug it, when plug it and turn it on, it will keep the silent mode as per the last setting.

## Operating Instructions

---






### USING THE APPLIANCE FOR THE FIRST TIME

Before making coffee you should use the coffee maker once with water only (**without coffee**).

### GETTING STARTED

1. Remove all packing material, any stickers, and so on.
2. Wash removable parts as instructed in CARE AND CLEANING.
3. Pour fresh cold water up to 10-cup level mark into the water tank.
4. Place filter into removable filter basket. Place basket into filter basket holder. Make sure the placement is correct.
5. Plug cord into standard electrical outlet.
6. Brew water through appliance without adding coffee grounds. We recommend filtered water.
7. Discard water from the carafe.
8. Turn off appliance; unplug and allow to cool down.






## SETTING THE CLOCK


1. Plug appliance into standard electrical outlet.
2. The digital clock display flashes and show “12:00” entering standby mode.
3. To change the time: Press  button to setting the clock. You just press   until the correct time appears on the display. Pressing the  button once, is for HOURS setting, pressing once more is for MINUTES setting.
4. Long pressing the  button, it adds or reduces continuously to the number/time you prefer.

**Note:** If the appliance is unplugged or power is interrupted even momentarily, you may need to reset time.

## BREW STRENGTH SELECTION

 


Plug appliance into standard electrical outlet. Press the  button, the display screen lights up and shows three beans, at this moment you may choose regular flavored coffee, strongly flavored coffee or more strongly flavored coffee to suit your personal taste. If you press the  button the first time, the display screen shows one bean, it is regular flavored coffee; If you press the  button the second time, the display screen shows two beans, it is strongly flavored coffee; If you press the  button the third time, the display screen shows three beans, it is strongly flavored coffee; Once finishing your taste choice, remember to press  (to confirm) so it flashes and starts working.

**Note:** If the appliance is working, you cannot change the brew strength selection, only need to press  to reset your selection. When finishing, it will enter to 'keep warm' state for 30mins.

The display screen will show the keep warm time and keep warm icon.

## AUTO CLEAN

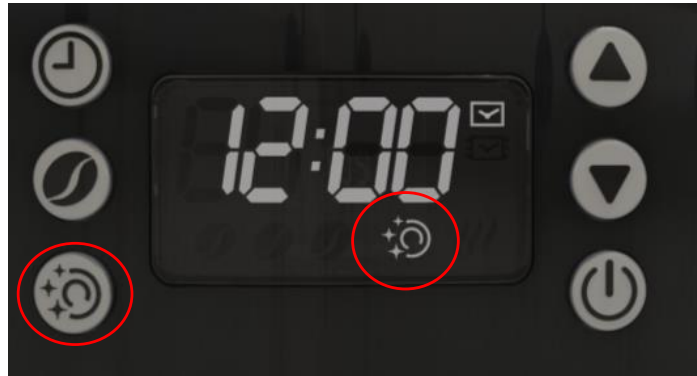



### Descaling With Auto Clean

Over time, calcium deposits or 'scale' may build up in your brewer. Scale is non-toxic but if left unattended can hinder brewer performance and cause premature failure. Regularly descaling your brewer helps to maintain quality coffee as well as the lifespan of the heating element, and other internal parts that come in contact with water throughout the brew process.

To make the descaling process as effortless as possible, an Auto Clean system has been programmed into your coffeemaker.

### How to use Auto Clean?

Follow the simple steps below. Your appliance will take care of the rest.

1. Combine 6 cups of white vinegar and 4 cups of cold water in carafe. We recommend filtered water.
2. Pour into water tank.
3. Place the filter in the removable filter basket. Insert filter basket into filter basket holder and close cover.
4. Make sure the carafe's lid is in place and place empty carafe on the warming plate.
5. Plug power cord into an outlet.
6. Press  to activate cleaning cycle; "" is displayed and starts to auto clean.
7. When the auto clean cycle is completed, it enters in standby mode automatically.
8. Brew fresh water through appliance following instructions given in 'GETTING STARTED' chapter before brewing coffee again.


## BREWING COFFEE

1. Open cover.
2. Fill water tank with desired amount of water. The 10 Cup line represents a full carafe of coffee. Do not fill water tank past this 10 Cup (maximum) line.

**Note:** It is recommended to use spring water or filtered water. Do not use distilled water.

3. Place filter into the removable filter basket.
4. Add desired amount of ground coffee. Close cover.
5. Make sure carafe's lid is properly attached to the empty carafe. Close the lid.

**Note:** Coffee may overflow if carafe lid is not properly placed.

6. Place empty carafe on the warming plate.
7. If not already plugged in, plug power cord into an outlet.
8. Choose the coffee strength to suit your personal taste.
9. Press the  button and brewing begins.
10. Once coffee grounds have cooled, carefully open cover and discard used grounds. Close cover.
11. The coffeemaker will keep brewed coffee warm for up to 30 mins. Then the coffeemaker automatically turns off.

**Note:** Once brewing is finished, machine gets into 'keep warm' mode. You can long press the ON/OFF button for about 3sec. to turn off the coffee maker.

At this time, the screen lights off but the time setting is still saved.

## CLEANING AND MAINTENANCE

---

**This product contains no user serviceable parts. Refer service to qualified service personnel.**

**Be sure the unit is unplugged and has cooled.**

1. Open the cover.
2. To remove the filter basket, grip the handle and lift straight up. Discard the coffee grounds.
3. Wash the filter basket, carafe and carafe's lid in the top rack of the dishwasher or wash by hand with hot water and soap.
4. Wipe the appliance's exterior surface, control panel and carafe warming plate with a soft damp cloth. Do not use abrasive cleansers or scouring pads. Never immerse the coffeemaker in water.
5. To clean the inside of the cover, open the cover and leave in the open position. Wipe surfaces with a damp cloth.

## TECHNICAL SPECIFICATIONS:

Model Number: R20841CMC / R20842CMG / R20843CMR / R20845CMK

Power Supply: 220-240V~ 900-1100W 50-60Hz



## NOTICE ABOUT RECYCLING



Your product is designed and manufactured with high quality materials and components which can be recycled and reused. This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste. Please dispose of this equipment at your local community waste collection/ recycling centre.

In the European Union there are separate collection systems for used electrical and electronic products.

Please help us to conserve the environment we live in!

## DECLARATION OF CONFORMITY

Herewith, below Company states that this product complies with the requirements of below directives:

EMC-Directive: 14 / 30 / EU

Low Voltage Directive: 14 / 35 / EU

ErP Directive 09 / 125 / EC

CE Marking: 93 / 68 / EEC

RoHS Directive: 11 / 65 / EU & 15 / 863 / EU

The detailed declaration of conformity can be found at

[www.morris.gr](http://www.morris.gr)



**KALLIOPI KARYDA & CO., LP**

87A, 17th Noemvriou str, P.C. 55535

Pylea, Greece

T: +302316006600 | F: +302316006650

[www.morris.gr](http://www.morris.gr)