



MORRIS

TOASTER INSTRUCTION MANUAL



**MODELS:
R20824TSC / R20825TSG
R20826TSR / R20827TSB
R20852TSK**



Please read these instructions carefully before use in order to avoid damage due to incorrect use and to understand better the functions of this product.

Please pay particular attention to the safety guide.

If you pass the device on to a third party, these Operating Instructions must also be handed over. Please keep them for future references.

IMPORTANT SAFEGUARDS

When using electrical appliance, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Make sure your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
3. Do not touch any hot surface. Use handles or knobs only.
4. To protect against electrical shock, do not immerse the cord, plug, or any part of the toaster in water or any other liquid.
5. Close supervision is necessary when the appliance is used by or near children.
6. Unplug the unit from the outlet when not in use and before cleaning.
7. Do not operate any appliance with a damaged cord or plug, or when in abnormal state. If its main cord is damaged, it must be replaced by the manufacturer, the nearest service agent or a qualified person.
8. Do not let the cord hang over the edge of a table or counter, or touch any hot surface.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. Do not use the appliance for other than its intended use.
11. Oversized food, metal foil packages or utensils must not be inserted in the toaster as they may cause fire or electric shock.
12. Bread may get burned, therefore toasters must not be used near or below curtains and other combustible materials, they must be attended.
13. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
14. Do not attempt to dislodge food when the toaster is in operation
15. Make certain to take the bread out carefully after toasting so as to avoid injuries
16. This appliance has been incorporated with a grounded plug. Please make sure the wall outlet in your house is well earthed.
17. The appliance is not intended to be operated by means of an external timer or remote-control separate system.
18. This appliance can be used by children aged from 8 years and above and reduced persons with physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

19. Keep the appliance and its cord out of reach of children less than 8 years.
20. Warning: if you have a small bread slice of less than 85mm length, you must pay attention to the potential risk of it burning while taking it out once being ready.
21. Do not use the appliance outdoors.
22. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments
 - farm houses
 - by clients in hotels, motels and other residential type environments
 - bed and breakfast type environments.
23. Save these instructions for future reference.


SPECIFIC SAFETY FOR THIS UNIT

Do not leave the appliance unattended very dry bread can sometimes begin to burn in the toaster.

CAUTION: metal parts become hot! Never insert forks, knives or any other object in the toaster!

GET TO KNOW YOUR TOASTER

1. 2 Large slots
2. Metal housing
3. Bread carriage handle
4. Reheat button
5. Defrost button
6. Cancel button
7. Browning control selector
8. Crumb tray under the unit
9. Sandwich clips

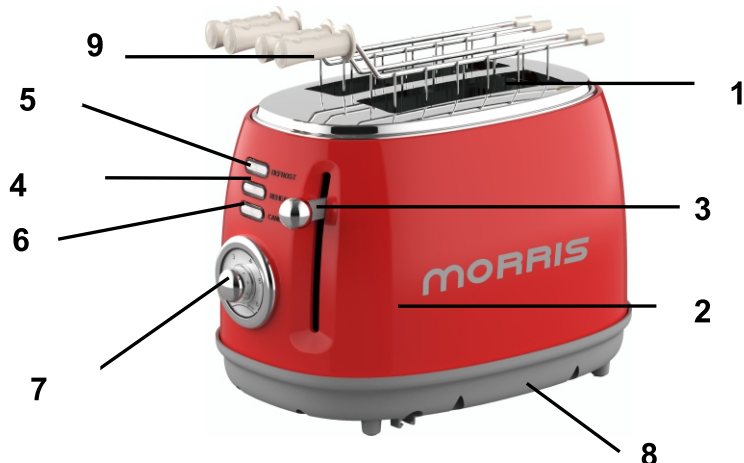

BEFORE FIRST USE

Let the unit run, without bread, about 3 minutes to remove the protective layer of resistance. For this, select the longest time with the Browning control selector. The light emission of smoke and smell is normal.

USE

- Unroll the power cord.
- Check that the tension in force corresponds to that indicated on the apparatus.
- Connect the apparatus in a socket-outlet,
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- Stand the appliance on a table or flat surface.
- The item must not be left unattended when it is connected to main supply.
- The item is not to be used, if it has been dropped if there are visible signs of damage or if it is leaking.
- Never modify the appliance in anyway.
- Do not use or keep this product outside when it is raining.
- Certain parts of the appliance can get hot. Do not touch them, as you may burn yourself.
- Place the bread slices in the slot for the French bread, cut a loaf shorter than the slot, then cut it in two pieces along its length.. Your appliance is provided to receive French bread, but also pieces of toast or other bread slices if their thickness and their length are shorter than the slot.
- Press down the bread carriage handle until it stops in the same time, the grid inside the slot will tighten around the bread in order to keep it away from the heating wires. Then release the pressure and the handle will stay in the lower position, which means that the heating process has begun. If the handle comes up immediately, check if the appliance is plugged in as it blocks when the unit is plugged in.
- You can adjust the browning intensity to obtain a more or less toasted bread by positioning the browning control selector to one of the degrees marked from 1 to 6. Therefore you only have to turn clockwise to increase the intensity, and anticlockwise to decrease it. The higher the number is, the more toasted the bread will be.

To use the functions:

After pressing down the bread carriage handle, push on:

- **The reheat button** which allows you to reheat bread or to toast bread.
- **The defrost button** which allows you to defrost bread that has been frozen beforehand.
- During the functioning, if you think that the bread is toasted enough or for another reason, you can break the heating process, simply by pressing the cancel button CANCEL.
- Use the clips to bake sandwich: unfold the clip, put inside 2 slices of bread and your desired filling e.g. cheese, ham etc, fold again, then press the bread carriage handle and roast 2 slices together.
- Always unplug the appliance after use and let it cool down before handling or storing it.

MAINTENANCE AND CLEANING

- Before attempting any cleaning operation, make sure the toaster is unplugged from the supply socket and fully cooled down.
- To remove bread crumbs slide the crumb tray situated on the side of the appliance.
- Never use sharp objects to clean. Doing so could damage the appliance.
- To clean the exterior surfaces, simply wipe over with a soft damp cloth.
- All other maintenance and repair should be performed by a qualified technician.

STORAGE

- Ensure the unit is completely cool and dry.
- Do not wrap the cord around the appliance, as this will cause damage.
- Keep the appliance in a cool, dry place.

SPECIFICATIONS

Power supply 220-240V 50/60H

Power 850W

Norm Class I


The characteristics may change without prior notice.

This unit is equipped with an electrical outlet with earth and must be earthed in the appropriate plug.

Note: In the event of question concerning the earth or electric connection, please consult a qualified personnel.

In the event of short-circuit, earthing reduces the risk of electric shock while making possible the current to be evacuated by the wire of ground.

CAUTION: In order to minimize the risks of electric shock, in the event of breakdown, do not open the case but call a qualified technician for repairs.

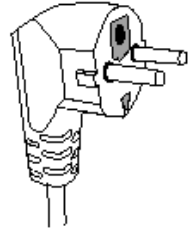

NOTICE ABOUT RECYCLING



Your product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste. Please dispose of this equipment at your local community waste collection/ recycling centre.

In the European Union there are separate collection systems for used electrical and electronic products.

Please help us to conserve the environment we live in!

DECLARATION OF CONFORMITY

Herewith, below Company states that this product, complies with the requirements of below directives:

EMC-Directive: 14 / 30 / EU

Low Voltage Directive: 14 / 35 / EU

ErP Directive 09 / 125 / EC

CE Marking: 93 / 68 / EEC

RoHS Directive: 11 / 65 / EU 15 / 863 / EU

The detailed declaration of conformity can be found at www.morris.gr



KALLIOPI KARIDA Co., LP.

87A, 17th Noemvriou str, P.C. 55535

Thessaloniki – Greece

T: +302316006600 | F:

+302316006650 www.morris.gr